



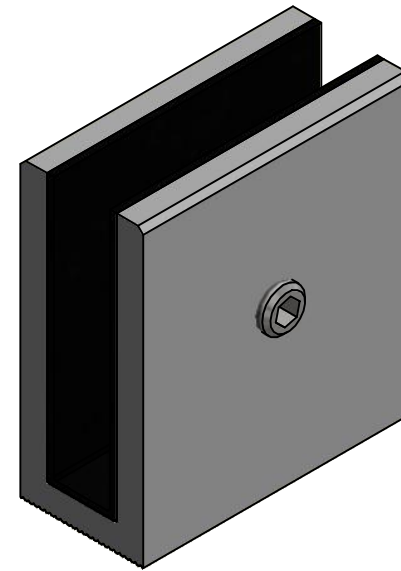


ROCA


For 6 - 10 mm glass
Hole in glass not required

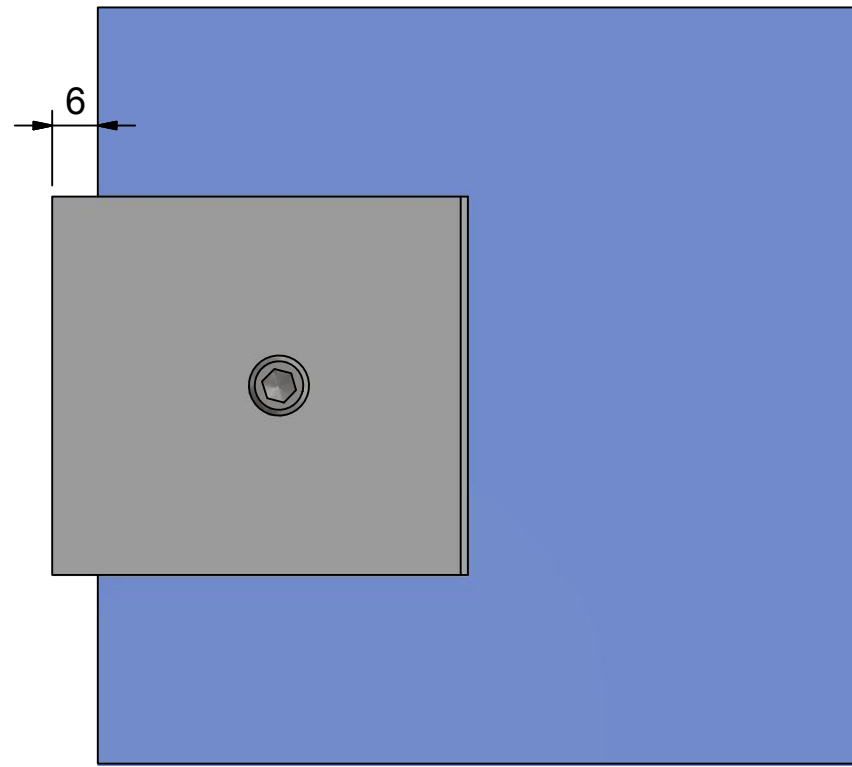



2x set screws included.
For 6mm glass use long screw,
8-10mm glass use short.

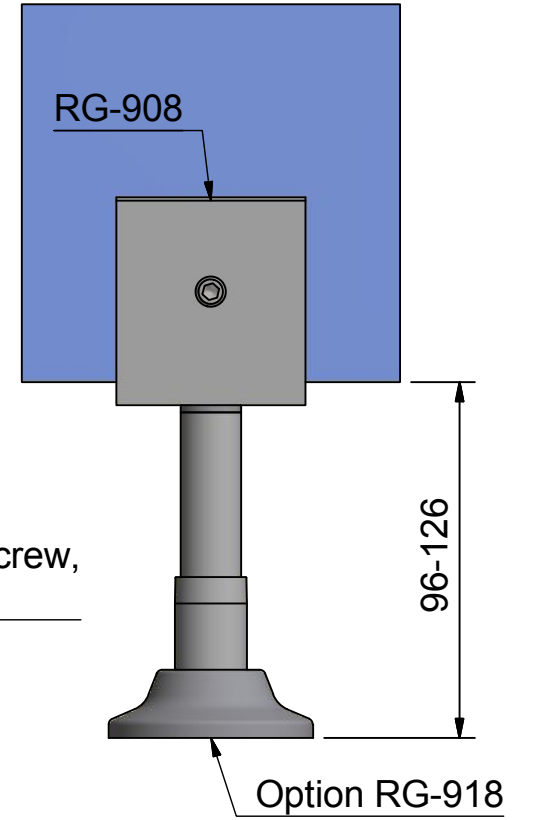

A-A (1:1)

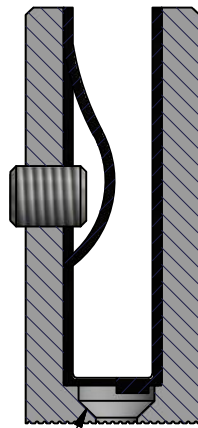

Ø5,5 THRU
✓ Ø10 X 90°

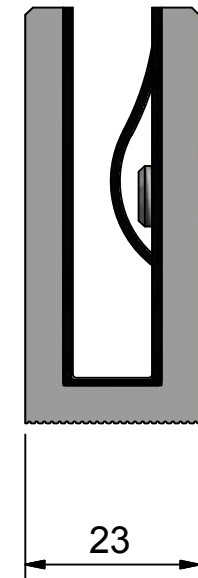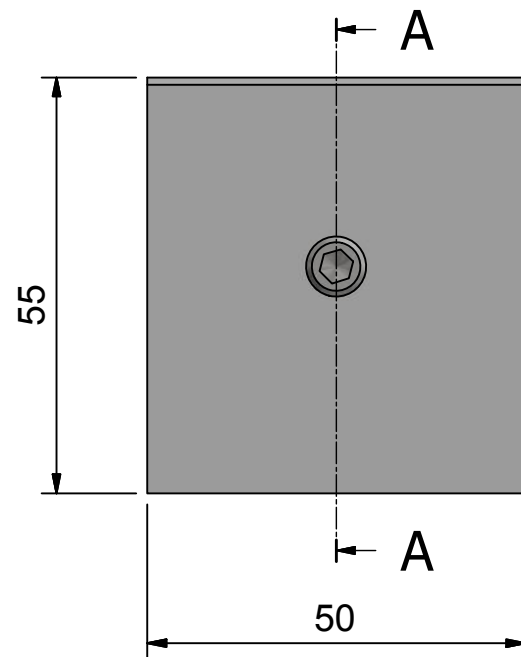

Glue or attach with screw

